

NON MAINTAINED EMERGENCY LUMINAIRES WITH WHITE LEDs



TECHNICAL CHARACTERISTICS	GR-391/L	GR-393/L
OPERATION VOLTAGE	220-240V AC/50-60Hz	
MAXIMUM POWER CONSUMPTION	2.5W/ 3VA	4W/ 4VA
BATTERIES (Ni-Cd)	3.6V/1.5Ah	3.6V/3Ah
BATTERY PROTECTION	From overcharge and full discharge	
INDICATIONS - CONTROLS	Battery charging LED, TEST button	
CHARGING TIME	24h	
MINIMUM AUTONOMOUS DURATION	90 min	180 min
ILLUMINATION SOURCE	2X16 LED	
ILLUMINATION (230V / EMERGENCY)	220/220lm	
DEGREES OF COVER PROTECTION	IP 40	
PRODUCED IN ACCORDANCE WITH	EN 60598-1, EN 60598-2-22, EN 55015, EN 61547, EN 61000-3-2, EN 61000-3-3	
OPERATION TEMPERATURE RANGE	0 to 40 °C	
RELATIVE HUMIDITY	Up to 95%	
CONSTRUCTION MATERIALS	Bayblend FR3010, transparent polycarbonate	
EXTERNAL DIMENSIONS	350 x 134 x 60 mm (CRV 362 x 134 x 90 mm)	
TYPICAL WEIGHT	940gr (CRV 1020gr)	1030gr (CRV 1110gr)
GUARANTEE	3 years (1 year for the battery)	

Thank you for purchasing this product of Olympia Electronics. A European manufacturer.

GENERAL

These luminaires are used indoors (ta 40°C) where emergency light is needed.

Each luminaire must be permanently connected to mains power supply.

In normal operation the battery is charging and the 2 yellow LED's light in each side of the screen.

In case of a mains power supply failure the luminaire will light the led strip automatically in emergency mode. When the mains power supply is restored the device turns to normal operation.

INSTALLATION

To install the luminaire follow the installation instructions on page 3.

ATTENTION!!!

1. Operations for installation, maintainance or testing must be done by authorized personel only.

2. The device must be connected to the mains power supply thru a fuse dependent by the total amount of the line's power load.

3. It is sugested to check every month the indication LED for battery charging, and by pushing the TEST button to check the

emergency cirquit. The lamp should light as long as the TEST button is pressed. In the opposite condition contact the installer.

4. It is sugested to check every 6 months the minimum autononous duration by disconnecting the mains power supply. Count the time that the led strip lights and in case of less time than the minimum autononous duration the battery must be replaced. If the measured time is considerably less than the minimum autonomous duration contact the installer. In case of battery or led strip replacement, these must be replaced by parts of the same type, by the manufacturer or by a competent person.

5. In case of inactive use for a period greater than 2 months, disconnect the battery by pulling out the battery's connector.

6. **It is not allowed to discard batteries in to common trash bins, they must be discarded only in battery recycling points.**




MARKING PANEL SP-114

A marking panel SP-114 can be installed on the luminaire in 3 different locations. This marking panel is installed perpendicular to the diffusor of the luminaire, as shown in the pictures below. The panel is pre-printed and has a plastic accessory on each side that is used to fasten the panel to the luminaires. There are 2 arrow stickers that can be placed in each side of the marking panel to point to the desired direction.




Placing the SP-114 marking panel

Place the plastic mounting accessories of the marking panel as shown in pictures.

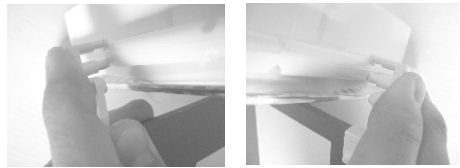


NOTE!! This marking panel (SP type) can not be installed on CRV luminaires.

Double Easy Light luminaires

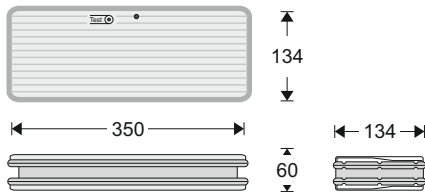


Double Easy Light/CRV luminaires

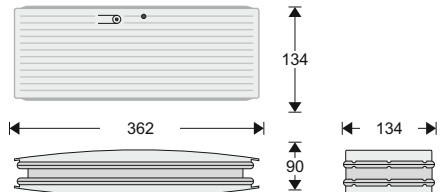

PLACING A-CRV PARTS

To install the curve crystal **A-CRV** you must first install the included plastic extension to mount it on the TEST button.

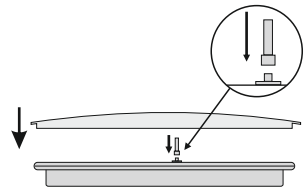

NOTE: LED= Light Emitting Diode

LABELING EXPLANATION:

X: Self contained

0: Non Maintained

A: Including test device

90: 1.5 hour duration

180: 3 hour duration

All the types of Easy Light series, are also produced with a new designed crystal with GR-XXX/CRV code, for example GR-391/CRV.


Battery replacement.

It can be done only by a competent person and after the mains interruption.

1. Detach the luminaire from its plastic base and remove the diffusor from each side. Unfasten the 4 mounting screws.
2. Disconnect the connector and remove the old battery.
3. Connect the new battery with the same type and place it in the position of the old one.
4. Replace the removed parts and power the device.

INSTALLATION INSTRUCTIONS

Connecting the terminal block

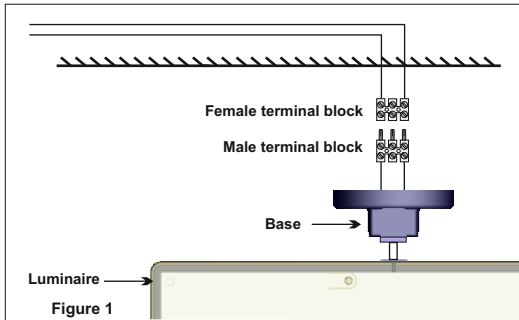

Connecting to the mains power supply






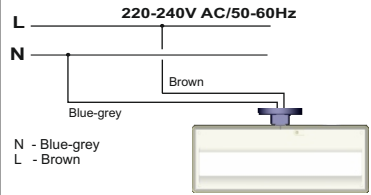


Figure 2: Connecting to the mains power supply

Mounting methods

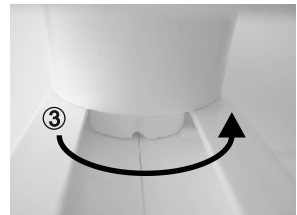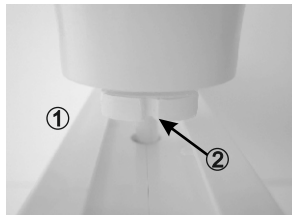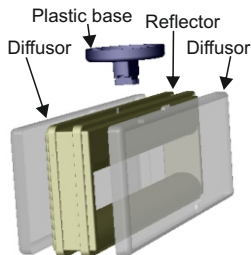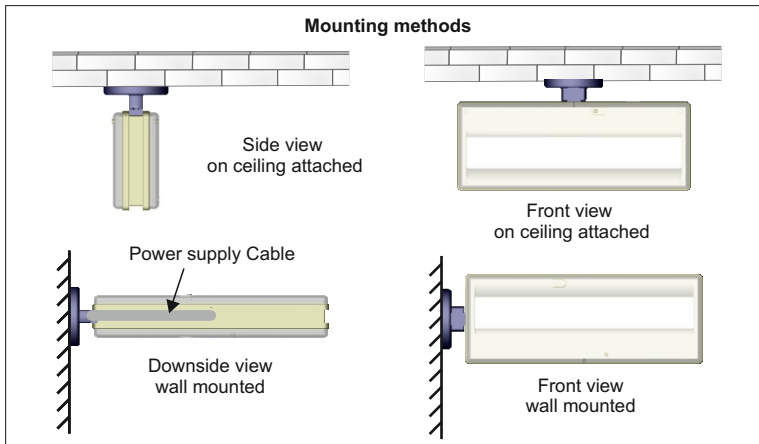

- ① Pass thru the central hole of the plastic base the luminaire's cables and connect them to the included terminal block (figure 1). N for neutral, L for live wire.
- ② Use the included mounting accessories to install the plastic base (*install the notch, facing the required direction of the luminaire*) and follow the mounting methods on the wall or ceiling.
- ③ Install the luminaire to the plastic base by turning it clockwise by 90° and then power it, with the mains power supply.

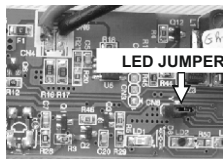

NOTE!! If you don't need the yellow led's to light in normal operation, then remove the led jumper.